Bounce Games Instructions

6873

Parts List:

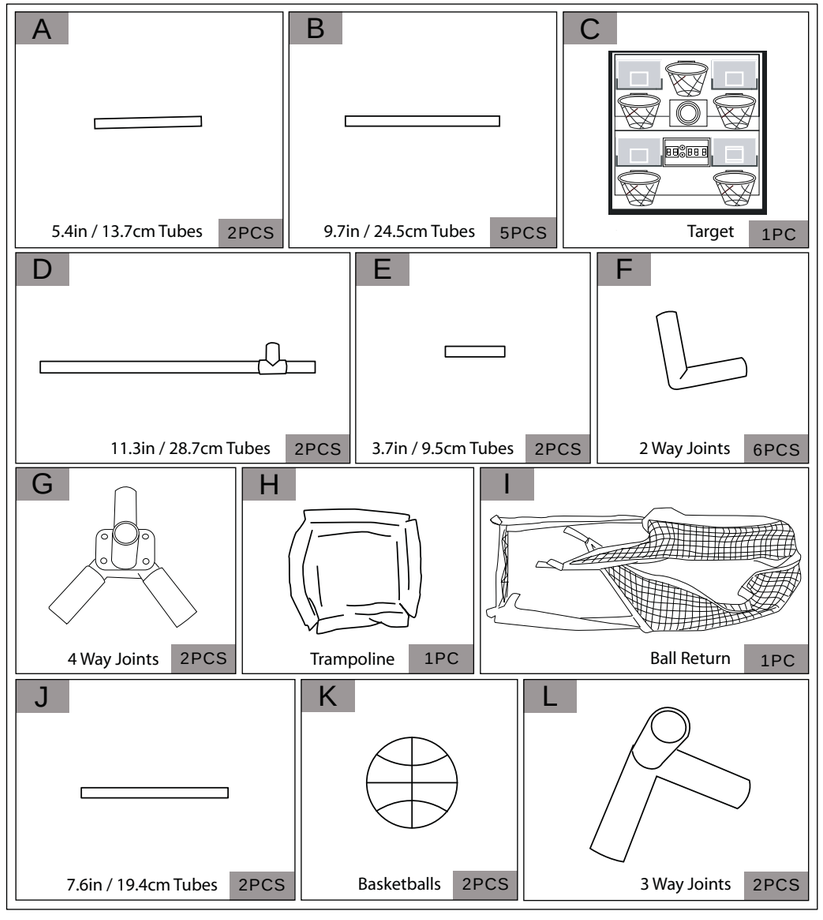

Assembly Instructions:

Step 1: Remove all components from the package and confirm that you have all parts illustrated.

Step 2: Assemble the trampoline as shown in Figure 1.

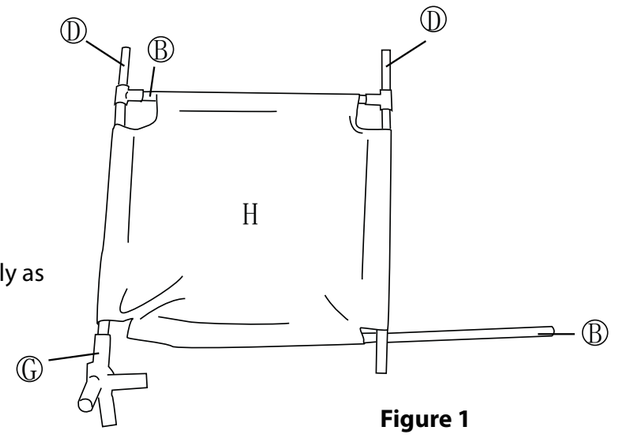

Figure 1

Step 3: Attach the target to the trampoline assembly as shown in Figure 2.

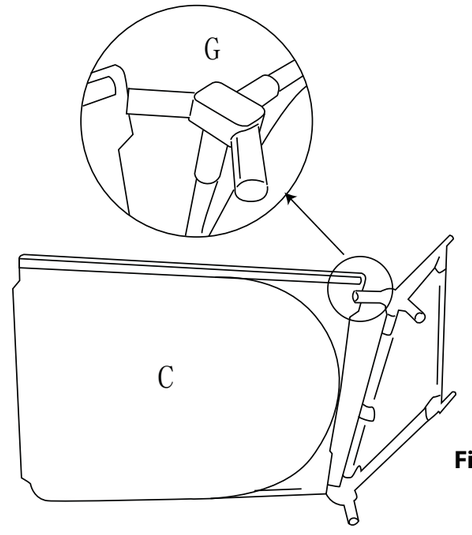

Figure 2

Step 4: Assemble the front and back frame supports as shown in Figure 3.

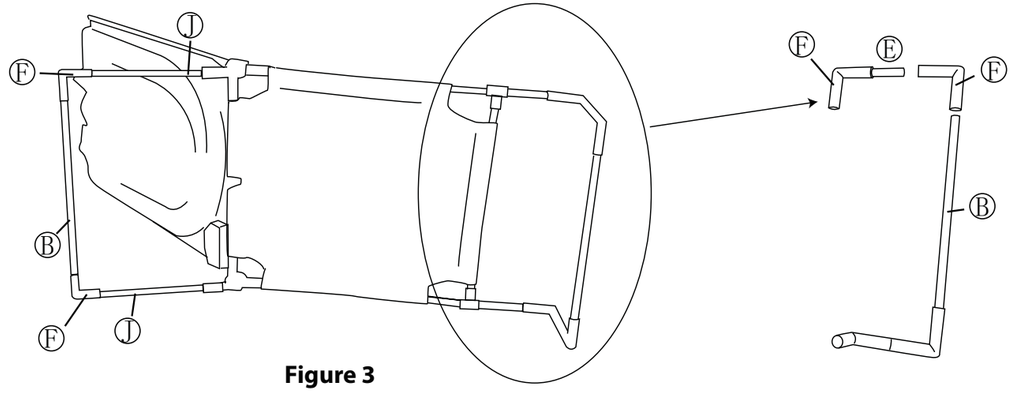

Figure 3

Step 5: Attach the frame components of L, A and B.

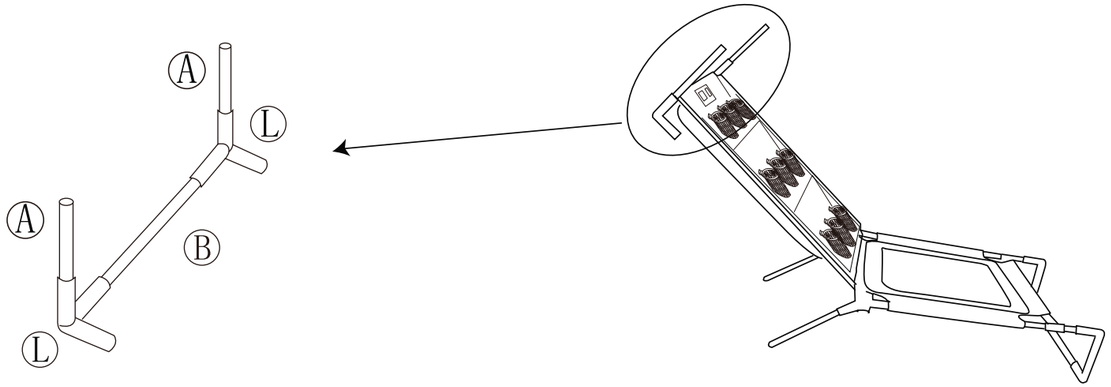

Figure 4

Step 6: Slide the Ball Return "I" onto tubes "A" and connect using the self-stick straps.

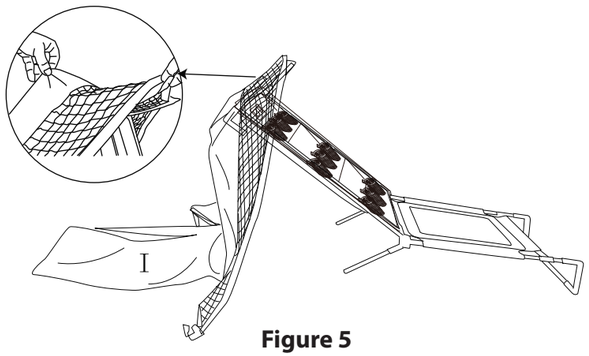

Figure 5

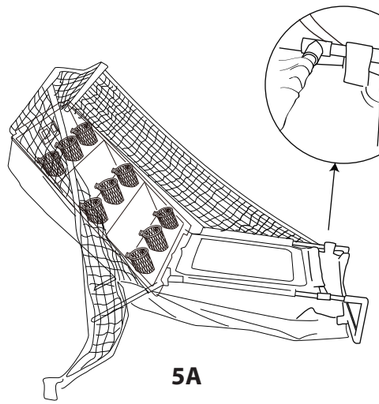

5A

Step 7: Attach the final frame components F, B, and J.

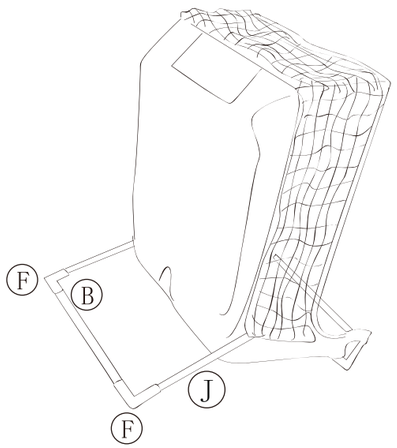

Step 8: Locate the battery compartment and insert (3) "AAA" Alkaline Batteries (Not included)

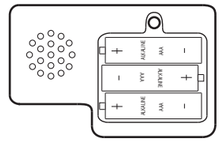

Requires 3 "AAA" size batteries (not included)
Do not mix old and new batteries.
Do not mix alkaline, standard (carbon-zinc), or
rechargeable (nickel-cadmium) batteries.

Now you are ready to play!

Game Play:

1) Turn the game on by pressing the power button on the scoring unit.
2) Press the start button.
3) Bounce the balls on the trampoline and into the target to score as many points as you can in 30 seconds!

Storage

1) Fold the target area down towards the trampoline.
Fold the back legs under the trampoline area. See Figures 6 and 7 below.

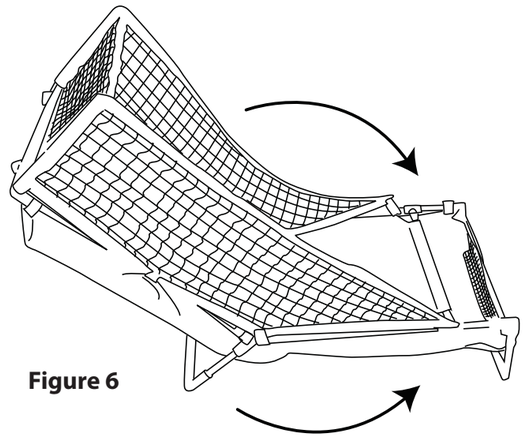

Figure 6

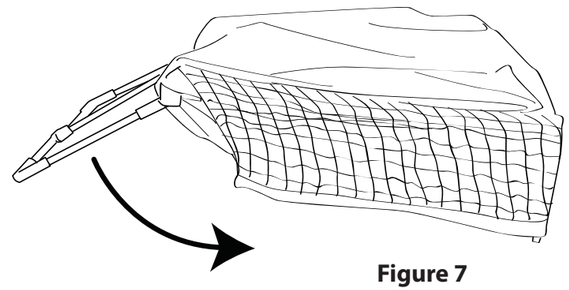

Figure 7

CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

NOTE: THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS B DIGITAL DEVICE; PURSUANT TO PART 15 OF THE FCC RULES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE IN A RESIDENTIAL INSTALLATION. THE EQUIPMENT GENERATES, USES AND CAN RADIATE RADIO FREQUENCY ENERGY AND, IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTIONS, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS. HOWEVER, THERE IS NO GUARANTEE THAT INTERFERENCE WILL NOT OCCUR IN A PARTICULAR INSTALLATION. IF THIS EQUIPMENT DOES CAUSE HARMFUL INTERFERENCE TO RADIO OR TELEVISION RECEPTION WHICH CAN BE DETERMINED BY TURNING THE EQUIPMENT OFF AND ON, USER IS ENCOURAGED TO TRY TO CORRECT THE INTERFERENCE BY ONE OR MORE OF THE FOLLOWING MEASURES:
-REORIENT OR RELOCATE THE RECEIVING ANTENNA.
-INCREASE THE SEPARATION BETWEEN THE EQUIPMENT AND RECEIVER.
-CONNECT THE EQUIPMENT INTO AN OUTLET ON A CIRCUIT DIFFERENT FROM THAT TO WHICH THE RECEIVER IS CONNECTED.
-CONSULT THE DEALER OR AN EXPERIENCE RADIO/TV TECHNICIAN FOR HELP.

For replacement parts call
1-781-341-5178 or 1-800-225-8649
OR visit www.franklinsports.com

Made in China
Franklin Sports Inc.,
Stoughton, MA 02072